

VEF 4

Outdoor Gobo light

Function	DMX Value	Settings	8 channels	9 channels
Dimmer	000-255	0-100%	1	1
Strobe	0-10	Always bright	2	2
	11-127	Strobe Speed from slow to fast		
	128-255	Linear Strobe Speed from slow to fast		
color	0-7	White	3	3
	8-15	color 1		
	16-23	color 2		
	24-31	color 3		
	32-39	color 4		
	40-47	color 5		
	48-55	color 6		
	56-63	color 7		
	64-71	White + color 1		
	72-79	color 1 + color 2		
	80-87	color 2 + color 3		
	88-95	color 3 + color 4		
	96-103	color 4 + color 5		
	104-111	color 5 + color 6		
	112-119	color 6 + color 7		
	120-127	color 7 + White		
	128-191	Clockwise rotation: fast to slow		
	192-255	Counterclockwise rotation: slow to fast		
Gobo	0-8	White	4	4
	9-17	Gobo 1		
	18-26	Gobo 2		
	27-35	Gobo 3		
	36-44	Gobo 4		

Function	DMX Value	Settings	10 channels	11 channels
Gobo	45-53	Gobo 5	4	4
	54-62	Gobo 6		
	63-71	Gobo 6 shake from slow to fast		
	72-80	Gobo 5 shake from slow to fast		
	81-89	Gobo 4 shake from slow to fast		
	91-98	Gobo 3 shake from slow to fast		
	99-107	Gobo 2 shake from slow to fast		
	108-116	Gobo 1 shake from slow to fast		
	117-127	White		
	128-191	Clockwise rotation fast to slow		
	192-255	Counterclockwise rotation slow to fast		
Gobo R	0-127	Static rotation by a certain angle	5	5
	128-191	Clockwise rotation fast to slow		
	192-255	Counterclockwise rotation slow to fast		
Focus	0-255	Focusing	6	6
Prism	0-31	Prism close	7	7
	32-255	Prism open		
Prism R	0-127	No rotate	8	8
	128-191	Clockwise rotation fast to slow		
	192-255	Counterclockwise rotation slow to fast		
Function	0-31	No action		9
	32-191	All Reset after three seconds		
	192-255	No action		

