

# VLED 804

LED Par

## DMX mode 1: 4CH

CH1	CH2	CH3	CH4
R	G	B	W
0-255	0-255	0-255	0-255

## DMX mode 2: 6CH

CH1	CH2	CH3	CH4	CH5	CH6
R	G	B	W	Dimmer	Strobe
0-255	0-255	0-255	0-255	0-255	0-255

## DMX mode 3: 8CH

CH1	CH2	CH3	CH4	CH5	CH6		CH7	CH8
Master	R	G	B	W	Program		SPEED	Strobe
0-255	0-255	0-255	0-255	0-255	CH2-CH6	0	0-255	0-255
					Pr.02	1-26		
					Pr.03	27-53		
					Pr.04	54-80		
					Pr.05	81-107		
					Pr.06	108-134		
					Pr.07	135-161		
					Pr.08	162-188		
					Pr.09	189-215		
					Pr.10	216-242		
					Sound Mode	243-255	Sensitivity	